CTA-1000C

CT PT ANALYZER

User Manual V2.0



❖ KVTESTER ELECTRONICS TECHNOLOGY CO., LTD. ❖

Dear Customers:

Thank you for purchasing our CTA-1000C CT PT Analyzer. Before you use the product for the first time,please carefully read this Manual which can help you skillfully use the Tester.



Our aim is to improve our products continuously,so that the product you use may be a little bit different from the Manual.In case of any changes,we will inform you in the attached sheets! Thanks for your understanding.If anything is unclear, please contact the After-Sale Service Department in our company,and we will certainly meet your requirements.



Since the I/O terminal,testing column and *etc*.may carry voltage,electric spark may be produced when you insert and unplug the test lead,power socket and *etc*..Please do be careful of electric shock and avoid hazards.Pay attention to your personal safety!

Prudent Warranty

For the products manufactured by our Company,if the defects appear within 6 months from the date of delivery,we can provide the replacement; if the defects of product quality appear within one years from the date of delivery, we can provide free services and repairs; if the defects appear more than one years after delivery,we can provide life-long paid maintenance services.

Safety Requirements

Please carefully read the following safety precautions so as to avoid personal injury and prevent the product or any other products connected thereto from being damaged.In order to avoid the possible dangers,the product can only operate within a specified range.

Only the qualified technicians can implement the maintenance.

- As a safety measure,the instrument is equipped with a protective earthing terminal.The ground terminal on the side of the device shall be reliably grounded before the test.
- Prevent falling:Do not put this instrument on an unstable platform or desktop in case the instrument falls down.
- Use the proper power cord:should use 220VAC,50/60Hz,withstand current 10A and above the power cord.
- Ensure good heat dissipation:Instrument side fan,ventilation hole for ventilation and heat dissipation, please do not plug.
- Short circuit protection:Do not let any foreign object fall into the case to avoid short circuit.
- Connect and disconnect properly:Do not connect or disconnect the test lead when the device is being tested.
- Please do not operate without instrument cover: if cover plate or panel has been removed,please do not operate this product.
- Use proper fuse:This equipment uses 10A fuse.
- Avoid exposed circuits and live metal:Please do not touch exposed contact and parts when electricity is on.
- In case of suspicious fault,please do not operate: if the product is suspected of damage,please repair personnel to check,do not continue to operate.
- Operating environment: please do not operate in humid environment and explosive environment.
- This instrument is a precision electronic instrument.Please pay attention to the high temperature environment such as scorching sun,etc.when you use it outdoors,pay attention to the blocking of the hot sun and ventilation,in case the instrument is overheated or leads to the decrease of the measuring accuracy.
- Product transportation: Please transport the cushion and so on outside the instrument when the transportation,in order to avoid the vibration bump,damage the instrument or reduces the instrument accuracy.

CONTENTS

Chapter I Instrument Characteristics and Parameters ..... - 5 -
1.1 Characteristics ..... - 5 -
1.2 Panel ..... - 6 -
1.3 Technical Parameter ..... - 7 -
Chapter II User Interface and Method of Operation ..... - 8 -
2.1 Current Transformer ..... - 8 -
2.1.1 Test Connection ..... - 8 -
2.1.2 Expansion Parameters ..... - 10 -
2.1.3 Test Results ..... - 13 -
2.2 Voltage Transformer ..... - 16 -
2.2.1 Test Connection ..... - 16 -
2.2.2 Expansion Parameters ..... - 17 -
2.2.3 Test Results ..... - 18 -
2.3 Self-test Page ..... - 19 -
2.3.1 Parameter Setting ..... - 19 -
2.3.2 Connection ..... - 19 -
2.4 Button Function ..... - 20 -
2.4.1 Button Function for Parameter Interface ..... - 20 -
2.4.2 Button Function for Result Page ..... - 21 -
Chapter III Appendix ..... - 23 -
3.1 Principle of Low-frequency Test ..... - 23 -
3.2 10% Error Curve ..... - 24 -
3.3 Actual Connection Method ..... - 26 -
3.4 Four-terminal Method of Measuring Principle Wiring ..... - 29 -

Chapter I Instrument Characteristics and Parameters

CTA-1000C CT PT Analyzer is new product created after widely adopt customers' advises and deep theoretical study. It is based on the automatic FA Series Transformer Tester General which is produced by our company that is widely acclaimed and applied. The adoption of high-performance DSP and ARM, advanced manufacturing technology ensure a stable and reliable product performance, full-featured, high degree of automation, high efficiency, in the domestic leading level, they are the professional testing equipment for transformer check in power industry.

1.1 Characteristics

◆ Full-featured, not only satisfy the test requirements of various CTs (include TP class), such as the excitation characteristics (i.e., volt-ampere characteristics), ratio, polarity, secondary winding resistance, secondary burden, ratio error and phase displacement, but can also be used for the tests of various PTs, including excitation characteristics of the electromagnetic unit, ratio, polarity, secondary winding resistance, ratio error and phase displacement.

◆ Automatically give CT, VT parameters, including knee point voltage / current, 10% error curve, the accuracy limit factor (ALF), instrument security factor (FS), the second time constant (Ts), remanence coefficient (Kr), saturated and unsaturated inductance etc.

◆ Test meet IEC60044 GB1208 (-1) GB16847 (IEC60044-6) became etc all kinds of transformer standards, and in accordance with the transformer types and levels of automatic choose which standard test


◆ Based on advanced principle of low-frequency test method that can meet the CT test on knee voltage up to 60kV.

◆ Friendly interface beautiful, all English graphic interface

◆ The instrument can store 1000 groups of test data that won't be lost when power off. After test ended, the data can be coped to PC by USB disk for analysis and being transformed into WORD report.

◆ Test is simple and convenient; one-click can complete tests of CT secondary resistance, excitation, ratio and polarity.

1.2 Panel

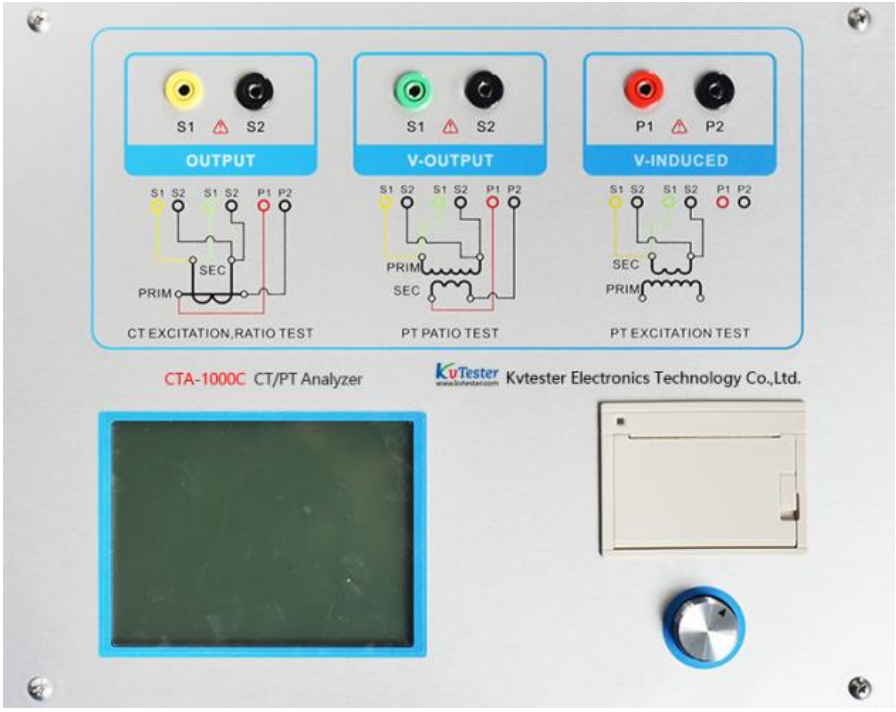

The instrument panel structure is as shown in right figure.

- Yellow S1, black S2 terminal: test power output
- Green S1, black S2 (middle one) terminal: measure output voltage
- Red P1, black P2 terminal: measure inductive voltage
- Keyboard: Enter the value and operational command
- LCD screen: GUI

1.3 Technical Parameter

Type		CTA-1000C
Function		CT, PT
Output		0~180Vrms,12Arms,36A(Peak value)
Voltage measurement accuracy		±0.1%
CT ratio test	Range	1~40000
	Accuracy	±0.05%
PT ratio test	Range	1~40000
	Accuracy	±0.2%
Phase test	Accuracy	±5min
	Resolving power	0.5min
Secondary resistance test	Range	0~300Ω
	Accuracy	0.2%±2mΩ
AC burden test	Range	0~1000VA
	Accuracy	0.2%±0.02VA
Input voltage		AC220V±10%,50/60Hz
Work environment		Temperature :-10°C~50°C, Humidity :≤90%
Size/Weight		365 mm×290 mm×153mm, Weight <10kg

Chapter II User Interface and Method of Operation

2.1 Current Transformer

In Para interface, use the Rotating mouse to switch cursor in transformer type frame, and then choose the current transformer (CT).

2.1.1 Test Connection

Used for selecting one or more experiment item, including four options such as resistance, excitation, ratio, burden etc. According to transformer type, four options can be combined as shown in below table.

Table 2.1 CT experiment project description

experiment item						Description	Connection diagram
resistance	excitation	ratio	error	limit	burden		
√						Measure CT's secondary winding resistance	Fig 2.1,can disconnection if measuring primary winding.
√	√					Measure CT's secondary winding resistance and excitation characteristic	Fig 2.1,can disconnection if measuring primary winding.
√		√	√			Measure CT's secondary winding resistance, check it's ratio and polarity	Fig 2.1
√	√	√	√	√		Measure CT's secondary winding resistance and excitation characteristic, check it's ratio and polarity	Fig 2.1
					√	Measure CT's secondary burden	Fig 2.2

Note:The '√' means valid, and the blank means invalid

Step:

Step 1. According to the CT testing project description of the table 2.1 to wiring (For all the CT structures, please refer to the description of appendix D for the actual connection mode)

Step 2. The other windings of the same CT should be opened; CT's primary side to grounding, equipment should be also to ground

Step 3. Power on and prepare parameters Settings.

Step 4. Then switch cursor to the "start" button to start

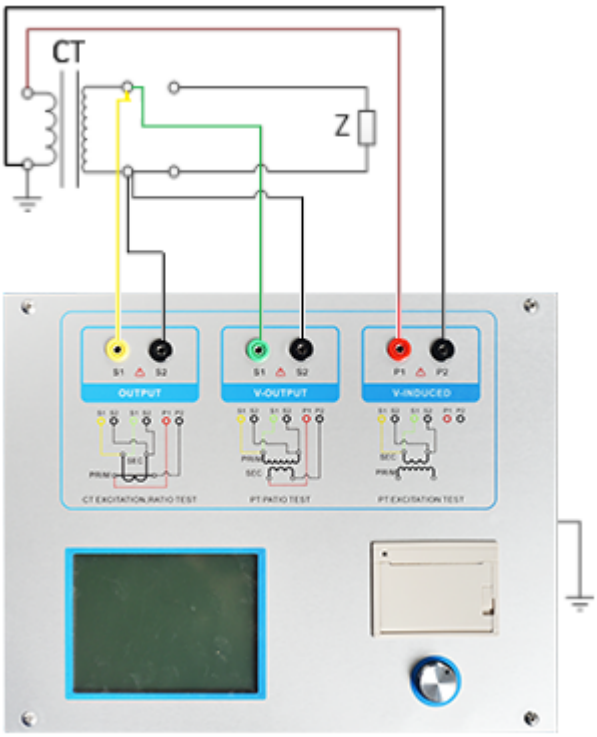


Fig 2.1 DC resistance, excitation, ratio experiment connection

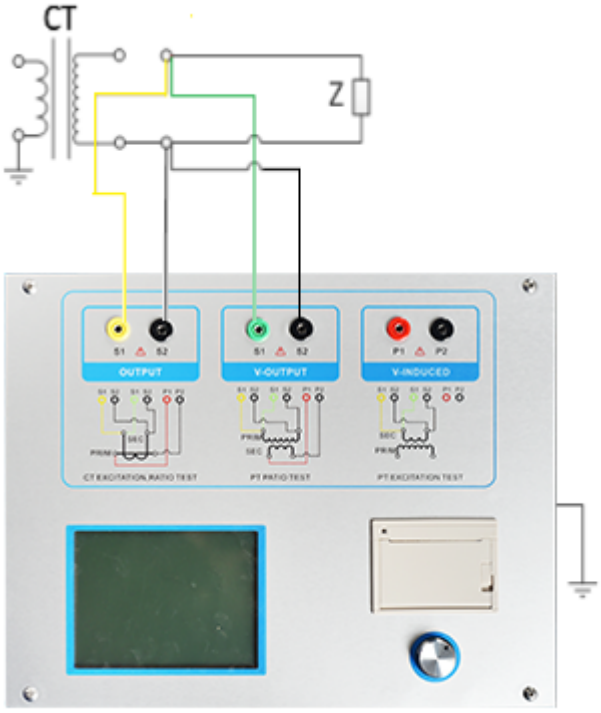


Fig 2.2 Secondary load experiment connection

2.1.2 Expansion Parameters

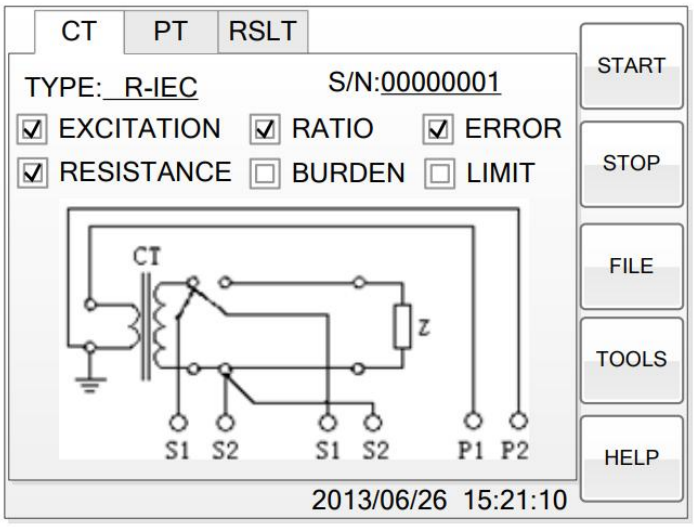


Fig 2.3 Basic parameter Settings interface

Parameter Settings:

Switch cursor to where the parameter you want to set by turning the Rotating mouse

1. Serial number and resistance number: Input letters and numbers, the filename default saved is "CT_ numbers _ winding number.ctp"

2. Rated secondary current: The current transformer's secondary rated current is 1A or 5A generally.

3. Class: For CT, there're 8 options for Measured winding class, they are P, TPY, metering, PR, PX, TPS, TPX and TPZ etc.

4. Current temperature: When measure the temperature of winding, generally input the current room temperature for reference.

5. Rated frequency: 50Hz or 60Hz

6. Maximum measured current: Can be generally set to rated secondary current value. For TPY class, can be generally set to 2 times rated secondary current value. For P class, assumed 5P40, rated secondary current is 5A, so the maximum should be set to 10%*15*5A=7.5A

If user want to measure the bellowing items, user need to set the basic parameters accurately (Suggest user setting himself)

(1) Turn ratio error, ratio error and phase error.

(2) Accurately calculate the limit e.m. f and their corresponding compound error.

(3) Measured accurately limit coefficient, Instrument security coefficient and symmetrical short-circuit current multiples.

(4) The measured transient dimensioning coefficient, peak transient error and second time constant.

For different CT, different parameters should be set. Details as table 2.2.

Table 2.2 CT parameter description

Parameters	Description	R-IEC R-ANSI	TPY	M-IEC M-ANSI	PR	PX	TPS	TPX	TPZ
rated primary current	Used to calculate the ratio of actual current accurately	√	√	√	√	√	√	√	√
rated burden	Rated load of plate, power factor for 0.8 or 1	√	√	√	√	√	√	√	√
power factor		√	√	√	√	√	√	√	√
Rated accurate limit coefficient K_{alf}	The provisions of the plate, default 10,used to calculate the limit e.m.f. and their corresponding composite error	√							
Rated symmetric short-circuit current coefficient K_{ssc}	The provisions of the plate, default 10,used to calculate the peak and their corresponding limits e.m.f transient error		√				√	√	√
Primary time constant	default :100ms		√					√	√
Second time constant	default :3000ms		√						√
Duty cycle	C-t1-O or C-t1-O-tfr-C-t2-O,default:C-t1-O cycle		√					√	
t1	Current time limit for the first time,default:100ms		√					√	
tal1	Time required to reach the specified accuracy during the first								

	magnetization cycle,default:40ms								
tfr	Time required to reach the specified accuracy during the second magnetization cycle,default:500ms,Choose C-t1-O-tfr-C-t2-O,Cycle will be shown		√					√	
t2	Current time limit for the second time,default:100ms.Choose C-t1-O-tfr-C-t2-O,Cycle will be shown		√		√			√	
tal2	Second the flow by maintaining accurate limits of time,default:40ms choose C-t1-O-tfr-C-t2-O,cycle will be shown		√					√	
Rated instrument security coefficient FS	Nameplate regulation,default:10 Used for calculation of the limit of composite error and their corresponding electromotive force			√					
Rated calculating coefficients						√			
Rated inflection point potential(Ek)						√			
Ie corresponding with Ek						√			
dimensioning factor							√		
Rated Ual	The rated equivalent quadratic limit voltage						√		
Ial corresponding with Ual							√		

Note: "√" expressed the need for settings that do not need to set up a blank.

2.1.3 Test Results

The test result interface as shown in fig 2.4

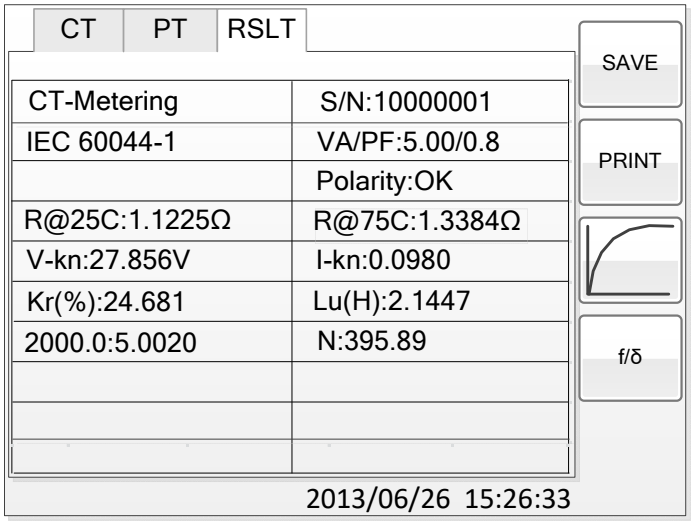


Fig 2.4 The test result interface

For different classes of CT and measured items, the test result will be different too, details as table 2.3:

Table 2.3 CT test results description

Result		Description	P	TPY	M	PR	PX	TPS	TPX	TPZ
Load	Actual load	Unit:VA,CT secondary measure actual load	√	√	√	√	√	√	√	√
	Power factor	Power factor of actual load	√	√	√	√	√	√	√	√
	Impedance	Unit:Ω,CT secondary measure secondary impedance	√	√	√	√	√	√	√	√
Resistance	Resistance(25℃)	Unit:Ω,CT secondary measure secondary resistance	√	√	√	√	√	√	√	√
	Resistance(75℃)	R_{ref} ,unit:Ω,Convert to resistance under 75℃	√	√	√	√	√	√	√	√
excitation	Knee voltage and knee current	unit:V and A,According to standard definition,when knee voltage increase	√	√	√	√	√	√	√	√

		10%,knee current increase 50%.								
	Unsaturated inductance L_u	Unit:H,The average inductance of linear section for excitation curve	√	√	√	√	√	√	√	√
	Remanence coefficient K_r	Ratio of magnetism and magnetic	√	√	√	√	√	√	√	√
	Second time constant T_s	Unit:s,the time constant of CT's second connect rated burden	√	√	√	√	√	√	√	√
	Limiting e.m.f E_{al}	Unit:V,calculation limit e.m.f. according to the CT nameplate and resistance under 75℃	√	√	√	√			√	√
	Composite error E_{al}	Limiting e.m.f or the composite error of rated knee potential	√		√	√	√			
	Peak transient error ε	Peak transient error of limiting e.m.f		√					√	√
	ALF	Actual ALF	√			√				
	Instrument security coefficient	Actual instrument security coefficient			√					
	Symmetrical short-circuit current multiples Kssc	Actual symmetrical short-circuit current multiples		√				√	√	√
	Transient dimensioning factor	Actual transient dimensioning factor		√					√	√
	Calculated coefficient Kx	Actual calculated coefficient					√			
	Rated knee						√			

	potential Ek									
	Ie corresponding with Ek	The actual excitation current corresponding with rated knee potential					√			
	Rated voltage Ual	The rated equivalent second limit voltage						√		
	Ial corresponding with Ual	The actual excitation current corresponding with the rated equivalent second limit voltage						√		
Ratio	Ratio	Actual current ratio under rated burden	√	√	√	√	√	√	√	√
	Turns ratio	The ratio of actual secondary winding and primary winding	√	√	√	√	√	√	√	√
	Ratio difference	The current errors under rated load	√	√	√	√	√	√	√	√
	Phase difference	The D-value of phase under rated load	√	√	√	√	√	√	√	√
	Polarity	There're two polarity relationship for primary CT and secondary CT: Positive and Negative	√	√	√	√	√	√	√	√
	Turn ratio error	The relative error between measured turn ratio and rated turn ratio					√	√		

Note: "√" expressed the need for settings that do not need to set up a blank.

2.2 Voltage Transformer

2.2.1 Test Connection

Used for selecting one or more experiment item, including three options such as resistance, excitation, ratio etc. According to transformer type, three options can be combined as shown in table 2.4.

Table 2.4 PT experiment project description

experiment item				Description	Connection diagram
Resistance	Excitation	Ratio	Burden		
√				Measure PT's secondary winding resistance	Fig 2.5, must disconnection if measuring primary winding.
√	√			Measure PT's secondary winding resistance and excitation characteristic	Fig 2.5,must disconnection if measuring primary winding.
		√		Check it's ratio and polarity	Fig 2.6
			√	Measure PT's secondary burden	

In Para interface, use the Rotating mouse to switch cursor in transformer type frame, then choose PT.

Experimental wiring procedure is as follows:

Step 1 According to PT testing program description of list 2.4, refer to figure 2.5 or figure 2.6for wiring.

Step 2 The other windings of the same CT should be opened.

Step 3 Power on and prepare parameters Settings.

Step 4 Then switch cursor to the "start" button to start.

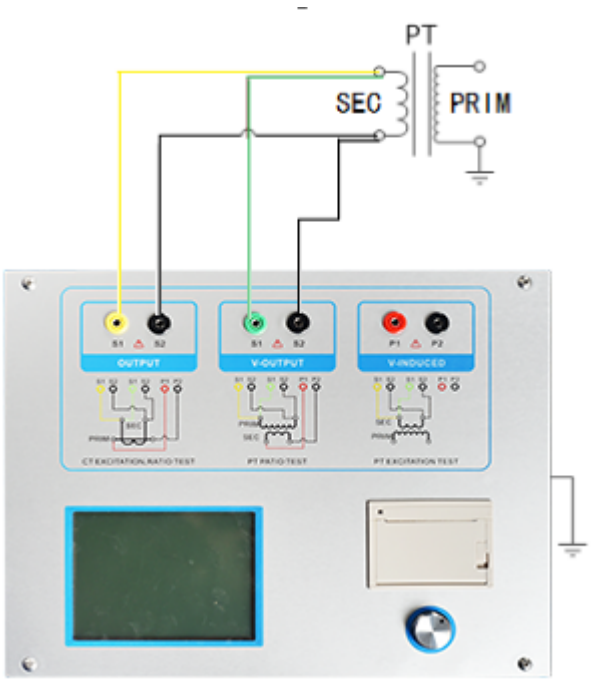


Fig 2.5 PT's DC resistance and excitation

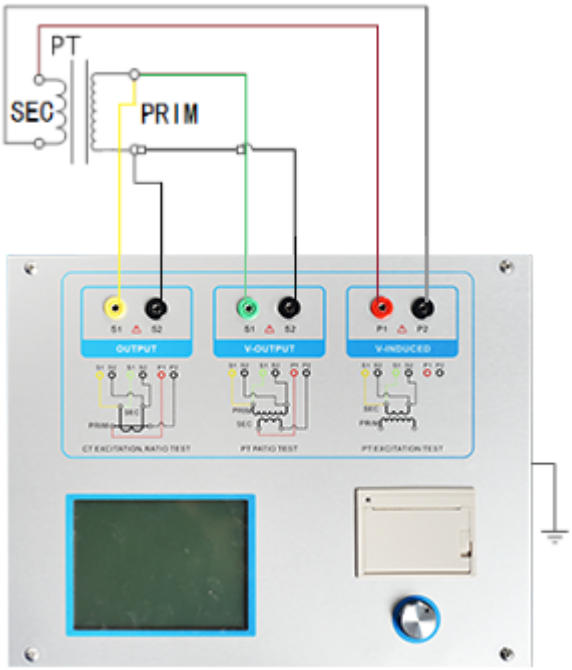


Fig 2.6 PT's ratio and excitation

2.2.2 Expansion Parameters

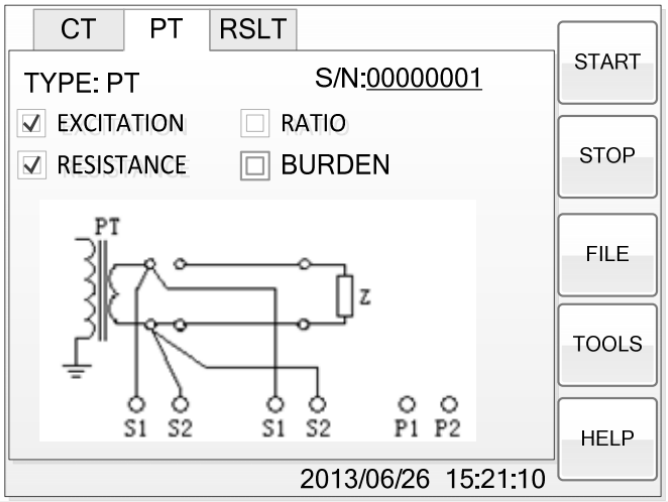


Fig 2.7 PT parameter establish interface

Parameter Settings:

Switch cursor to where the parameter you want to set by turning the Rotating mouse.

(1) Serial number and resistance number: Input letters and numbers directly.

(2) Rated secondary voltage: Secondary rated voltage of Voltage transformer.

(3) Class:For CT, there are 2 options for Measured winding class, they are P and metering etc.

(4) Current temperature: When measure the temperature of winding, generally input the current room temperature for reference.

(5) Rated frequency: 50Hz or 60Hz.

(6) Maximum test voltage: The equivalent voltage under the maximum frequency of output while testing.

(7) Maximum test current: The maximum AC current of output while testing.

2.2.3 Test Results

Test results interface as shown in Fig 2.8

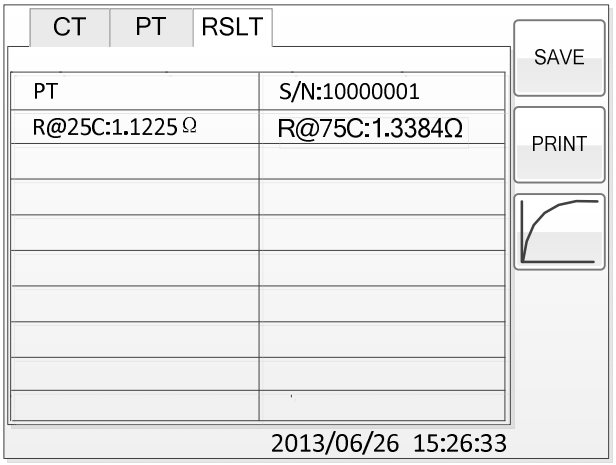


Fig 2.8 PT's test results interface

According to different voltage transformer type and experiment item, the results will be also different. The detailed as shown in Table 2.5.

Table 2.5 PT test results description

Result		Description	P	M
Resistance	Resistance(25℃)R	Unit:Ω, resistance value under current temperature	√	√
	Resistance(75℃) R_{ref}	Unit:Ω,Resistance value under reference temperature(the temperature is variable)	√	√
Excitation	Knee voltage and knee current	Unit:V and A, According to standard definition, when knee voltage increase 10%,knee current increase 50%.	√	√
Ratio	Ratio	Actual current ratio under rated burden	√	√
	Turns ratio	The ratio of actual secondary winding and primary winding	√	√
	Polarity	There're two polarity relationship for primary and secondary , Positive and Negative	√	√

2.3 Self-test Page

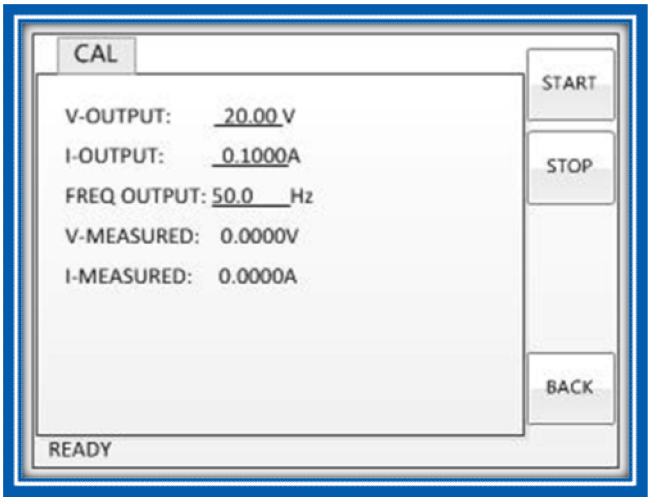


Fig 2.9 Self-test interface

2.3.1 Parameter Setting

The required self-test parameters are shown in the table 2.7:

Table 2.7 Self-test parameters

Parameter	Description
Test current	The need for device output current, valid value range: 1mA~5A
Test voltage	The need for device output voltage, valid value range: 1V~100V
est. frequency	Installation of the output voltage or current frequency, scope: 0~50Hz

After testing Current test set or test voltage, set the test frequency, the frequency of the device will output the corresponding voltage or current, to detect and display the actual voltage or current. In the choice of voltage, if the burden is too small, resulting in greater than the actual current RMS 5A, show that information overburden. In the selection of current, if the burden too much, leading to the actual test voltage RMS is greater than 100V, it will display information overburden.

2.3.2 Connection

When Choosing voltage tests, the two terminals will be short Yellow S1 Then, Black S2 shorted the two terminals. Use multimeter to get the voltage value between Green S1 and Black S2 (middle one), if the value is the same with actual voltage of instrument, it is OK.

When Choosing Current test, the shorted output Yellow S1, Black S2 terminals. Do not take the wrong attention. Series connecting a multimerter between Green S1 and Black S2 (middle one), if the current value of multimerter is the same with actual current of instrument, it is OK.

2.4 Button Function

2.4.1 Button Function for Parameter Interface

(1) Open a report

The interface of opening a report is shown in Fig 2.12 Choose to open a report, the relative information will be displayed in corresponding column.

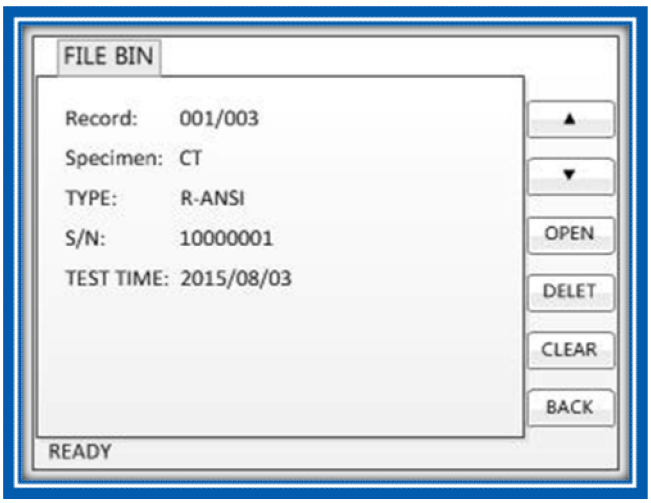


Fig 2.12 Open a report

(2) System Tools

The interface of system tools is shown in Fig 2.13. In this interface, some operations can be performed, such as time adjustment, file delete, system up gradation, etc.

(3) Help

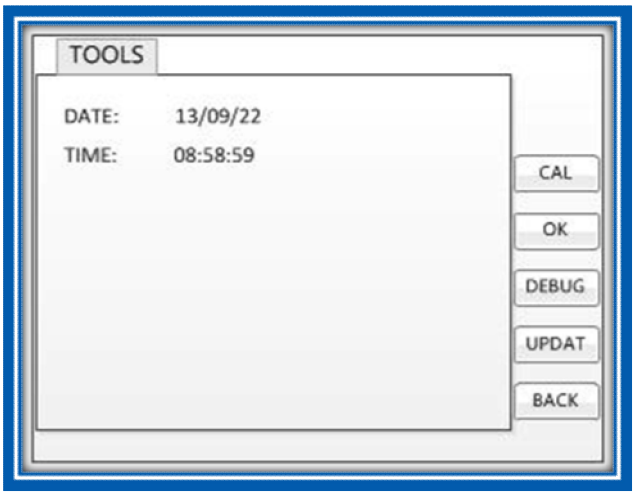


Fig 2.13 System tool interface


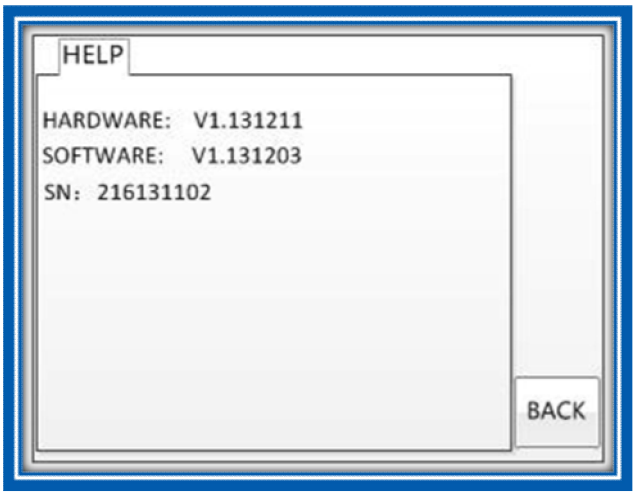


Fig 2.14 Help interface

2.4.2 Button Function for Result Page

(1) Error data

Selecting the error data will show 5% and 10% error cases, the relationship of rated primary current multiple and the maximum burden is shown as Fig 2.15. These data is calculated according to the actual excitation. The calculation Method is given in appendix B.

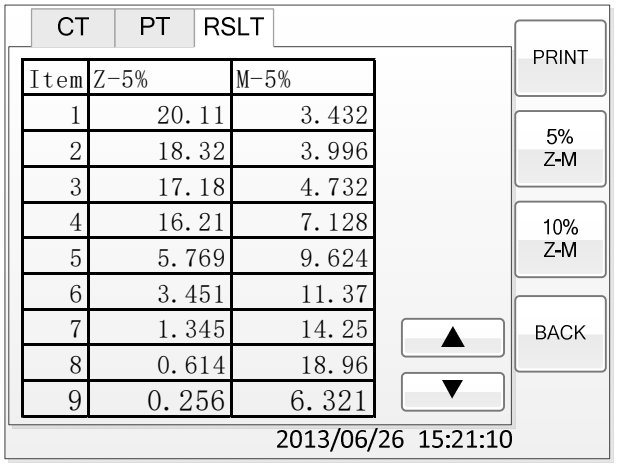

Item	Z-5%	M-5%
1	20.11	3.432
2	18.32	3.996
3	17.18	4.732
4	16.21	7.128
5	5.769	9.624
6	3.451	11.37
7	1.345	14.25
8	0.614	18.96
9	0.256	6.321

Fig 2.15 5% error data interface

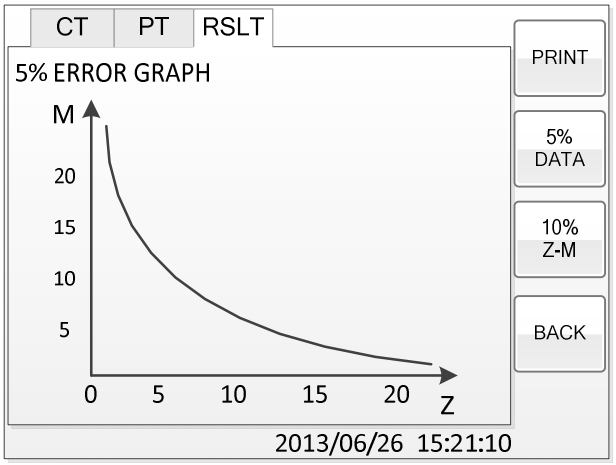


Fig 2.16 5% error curve interface

(2) Error curve

Selecting the error curve, the relationship curve of rated primary current multiple and maximum burden will be shown as fig 2.16 according to 10% (or 5%) error. The x axis is rated primary current multiple; axis y is allowable maximum burden.

(3) Excitation data

Selecting the excitation data, excitation data interface will be shown fig 2.17. In the figure, knee voltage and current is automatically calculated and shown, the user can print the date.

(4) Excitation curve

Selecting Excitation curve, the excitation curve of the interface will be shown in Fig 2.18, knee voltage and current is given.

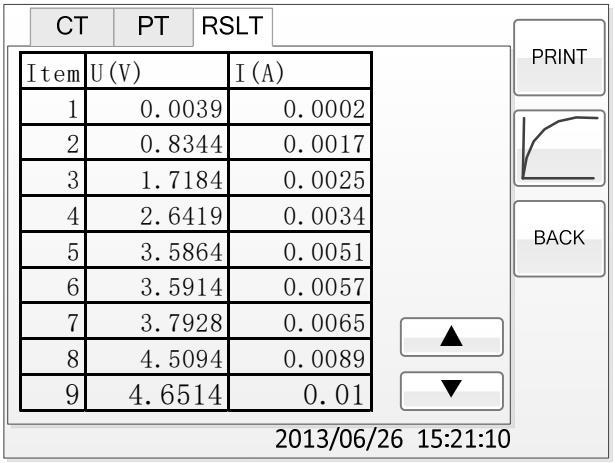


Fig 2.17 Excitation data

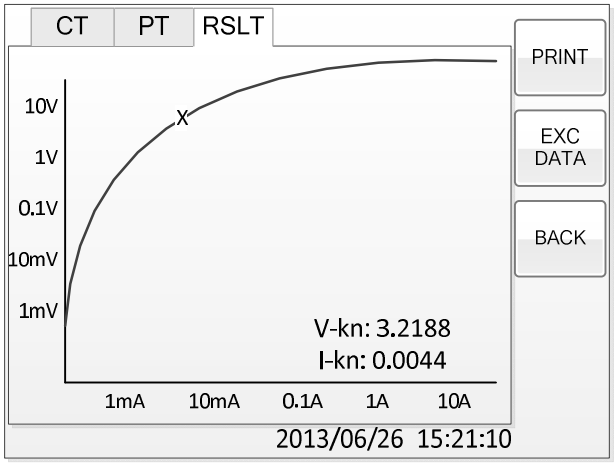


Fig 2.18 Excitation curve interface

(5) Ratio page

Used for displaying the test results of ratio. Polarity, ratio error, and phase displacement as shown in fig 2.19.

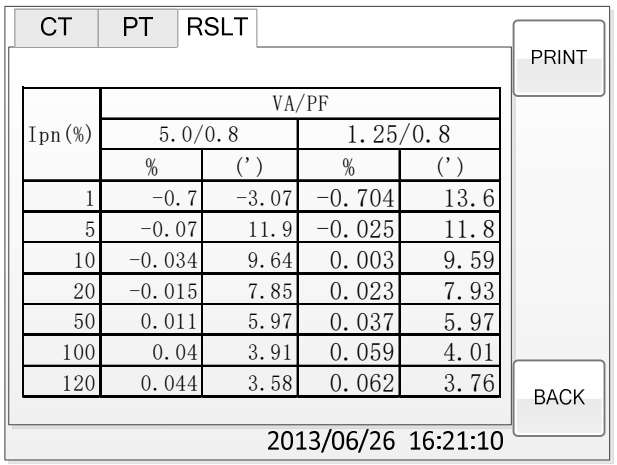


Fig 2.19 Ratio page

Chapter III Appendix

3.1 Principle of Low-frequency Test

IEC60044-6 standard (corresponding to the national standard GB16847-1977) claims, CT test can be done in conditions lower in frequency than the rated, and avoid secondary windings the risk of failing to allow the terminal voltage. The only requirement is that the core has the same size on the magnetic flux.

IEC60044-6 standard formula for calculating the magnetic flux given by:

$$\Psi(t) = \int_0^t [U_{CT}(t) - R_{CT} I_{CT}(t)]dt + \Psi_0 \qquad \text{(A.1)}$$

Where,

R_{CT} : Secondary winding resistance

U_{CT} : Secondary winding terminal voltage

I_{CT} :Secondary current

Ψ_0 :The initial flux Alternation

$\Psi(t)$: T the magnetic moment of the cross-linking

The definition of Core Voltage:

$$U_C(t) = U_{CT}(t) - R_{CT} I_{CT}(t) \qquad \text{(A.2)}$$

When the core voltage $U_C(t)$ for the sinusoidal signal are: (A.3)

Core voltage RMS to meet:

$$U_{Crms} = \frac{\omega \Psi_m}{\sqrt{2}} = \frac{2\pi f \Psi_m}{\sqrt{2}} = 4.44 f \Psi_m \qquad \text{(A.4)}$$

Where:

f : For the sinusoidal signal frequency

As can be seen, the largest settlement in the same chain of magnetic flux Ψ_m , the core is proportional to voltage and frequency. Therefore, as long as the core has the same size on the magnetic flux, then the test CT can be lower than the rated frequency of the conduct, when the core voltage amplitude required to reduce the requirements, test requirements of the secondary winding of the client voltage also be reduced accordingly. On the frequency of low-frequency test results can be rated after the conversion frequency of CT test results.

3.2 10% Error Curve

Current transformer error was mainly due to the existence of exciting current I_0, which allows the secondary current I_2 and secondary lateral conversion to a current value I_1 is not only not the same, but different phase, which resulted in the error of current transformer .

The ratio of differential current transformer is defined as:

$$\varepsilon = \frac{I_1^{'} - I_2}{I_1^{'}} \times 100 = \frac{I_0}{I_1^{'}} \times 100 \qquad \text{(B.1)}$$

Current Transformer relay request a current I_1 equal to the maximum short-circuit current, the ratio difference is less than or equal to 10%. Difference in the ratio equivalent to 10%, the secondary current I_2, and conversion to a secondary lateral excitation current I_1 between the current I_0 and meet the following relationship:

$$I_1^{'} = 10 I_0 \qquad \text{(B.2)}$$

$$I_2 = 9 I_0 \qquad \text{(B.3)}$$

Definite M as a multiple of the maximum short-circuit current, K for the current transformer ratio, there are

$$M = \frac{I_{1M}}{I_{1N}} = \frac{K \times I_1^{'}}{K \times I_{2N}} = \frac{10 I_0}{I_{2N}} \qquad \text{(B.4)}$$

Where

I_{1M} The largest one-side short-circuit current

I_{1N} Rated current for one side

I_{2N} Rated current for the secondary side

When Ration error is 10 percent, the maximum allowable burden impedance Z_B is calculated as:

$$Z_B = \frac{E_0}{I_2} - Z_2 = \frac{E_0}{9 I_0} - Z_2 \qquad \text{(B.5)}$$

Where

Z_2 For the current transformer secondary winding impedance

E_0 Is Current transformer secondary winding for the induction electromotive force, and the relationship between E_0 and I_0 is the characteristic curves described by the excitation.

Based on the above formula, the final could be a multiple M of the maximum short-circuit current and burden impedance Z_B of the maximum allowable 10% error described curve (see Figure 2.12).

3.3 Actual Connection Method

CTA-1000C for the CT test the basic connection steps (see Figure D.1) as follows:

(1) 4mm^2 line the left side of CTA-1000C is connected to the grounding terminal protected.

(2) To connect a CT primary side and secondary side terminals of a terminal to protected areas.

(3) To ensure that all the CT terminal of the other transmission lines disconnect from, all other windings open.

(4) 2.5mm^2 red and black line CT secondary side connected to the CTA-1000C "Output" S1 and S2 jack, the yellow line and 1.2mm^2 line CT secondary side connected to the CTA-1000C "Sec" jack of the S1 and S2, the attention of even the two black lines in the CT secondary side has received the same protection to terminal.

(5) Green Line and 1.2mm^2 lines CT is connected to a side of CTA-1000C 's "Prim" of P1 and P2 terminal, P2 and CT through the black line is connected to the protection of one side of the terminal connected.

(6) No problems in check wiring, to begin testing.

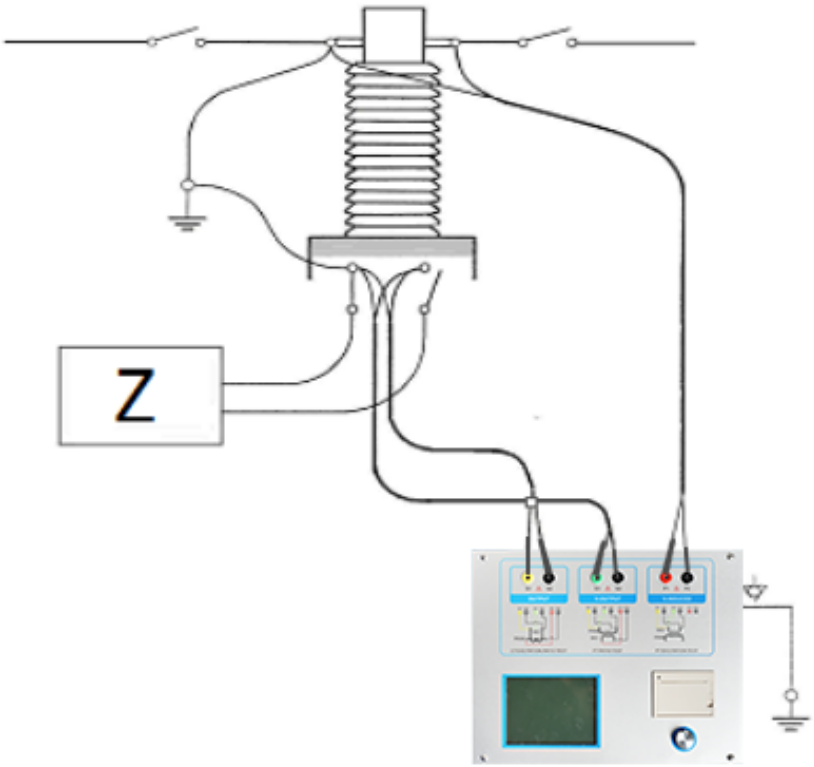


Figure D.1 Typical Connection

[1] JYH-C in the triangle connection transformer CT test conducted on the connection mode as shown in Figure D.2.

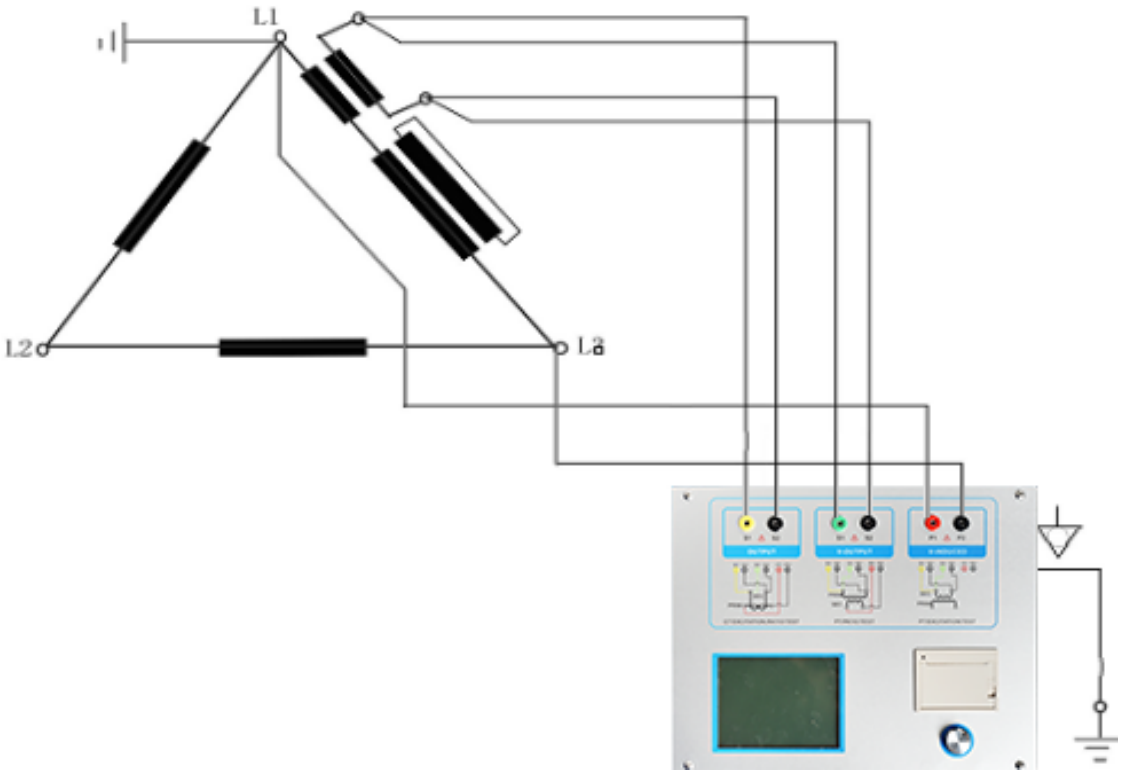


Figure D.2 CTA-1000C in the triangle on the transformer connection when the connection mode test

Figure D.2 CTA-1000C in the triangle on the transformer connection when the connection mode test.

[2]CTA-1000C for transformer testing casing CT Connection shown in Figure D.3.

Attention: H1 terminal must be disconnected first. Otherwise, if one took the short side, the CTA-1000C cannot obtain the correct result.

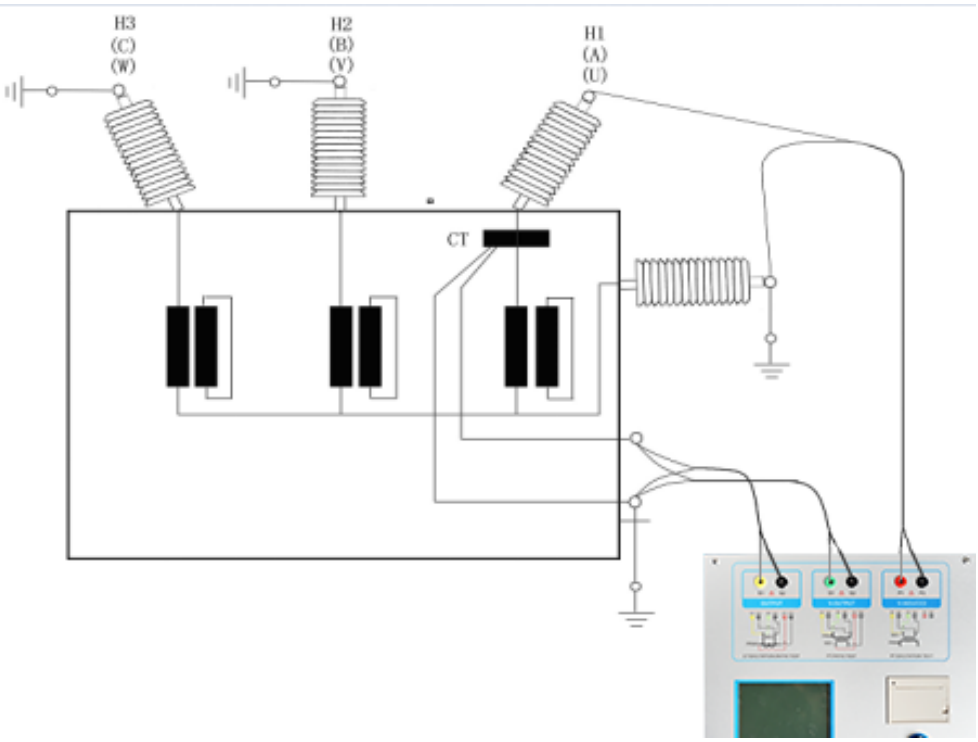


Figure D.3 CTA-1000C on the transformer bushing testing at the time of CT Connection

[3]CTA-1000C in the GIS (SF6) switch on the wiring of the CT test mode as shown in Figure D.4. NOTE: Disconnect all connected with the bus switch, grounding switch closed.

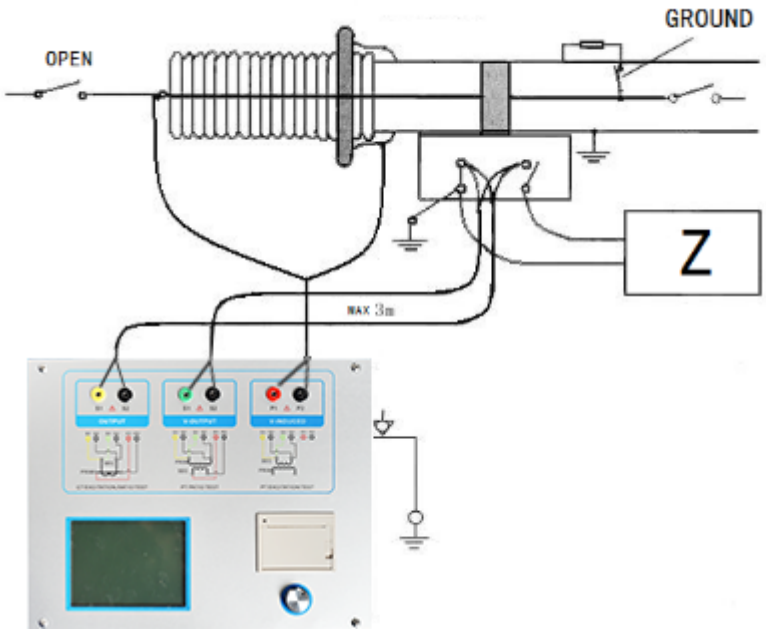


Figure D.4 CTA-1000C on GIS (SF6) switch on the test at the time of CT Connection

3.4 Four-terminal Method of Measuring Principle Wiring

Impose a voltage output signal Vs to a source impedance R, will produce a current I, in figure E.1

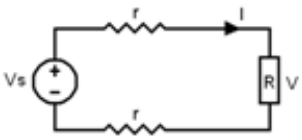


Figure E.1



Figure E.2

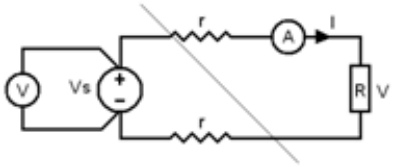


Figure E.3

For measurement of the impedance value, the impedance measurement of the voltage U is needed :

$$R = V / I$$

From the measured impedance voltage source to some wires, wires have resistance r, resulting in V = Vs, so if the accurate measurement of impedance R, can not simply replace the Vs with V.

Impedance R of the measuring circuit should be used Figure E.2 connection method, measuring the voltage meter voltage must be separate from the R at both ends with wire connection to the accurate measurement of R value of the voltage V. R is used at both ends by four wire cables, it is known as 4-side wiring method. Figure E.3 of the wiring is wrong.

Adopt CTA-1000C measure the resistance, variable ratio, excitation; the law of transformers is required to use 4-side wiring, in figure E.4.

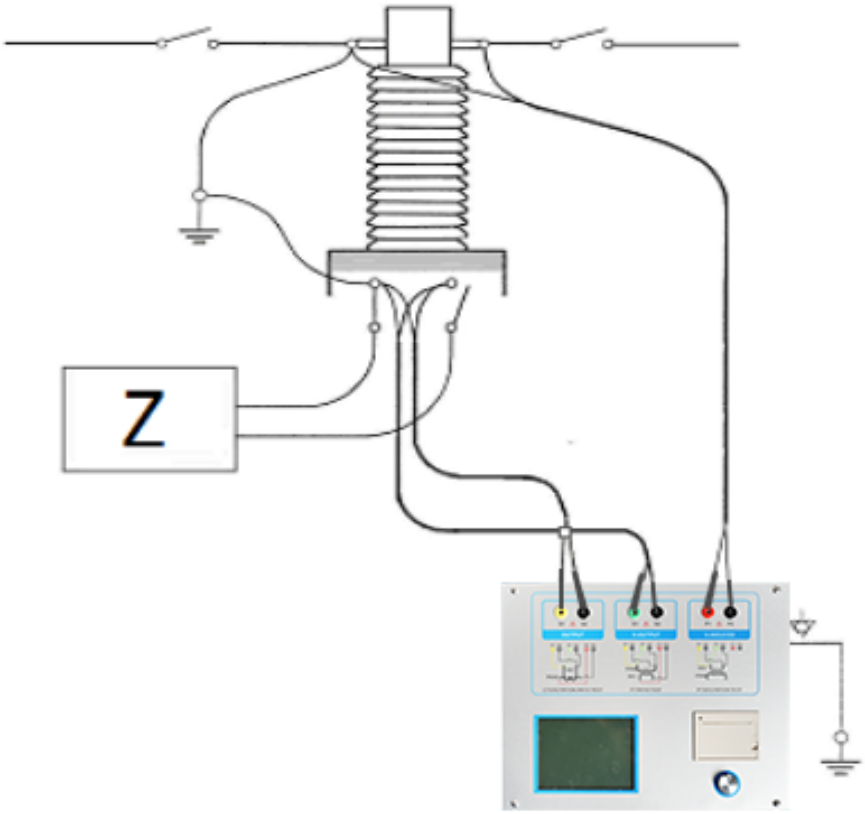


Figure E.4

Four-terminal method under test must pay attention to wiring terminal connection winding.

Figure E.5 the connection is correct, Figure E.6, 7 the connections are wrong.

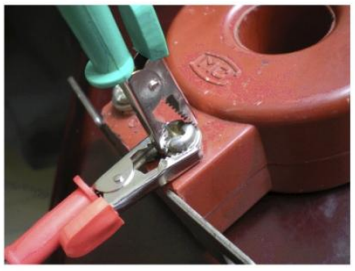


Figure E.5



Figure E.6

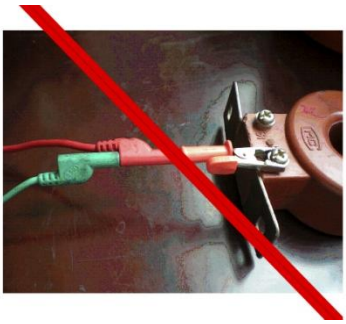


Figure E.7

KVTESTER ELECTRONICS TECHNOLOGY CO., LTD.

- Web site: WWW.KVTESTER.COM
- Address: No.120, Guanggu Road, East Lake New High-tech Development Zone, Wuhan, China
- Email: sales@kvtester.com
- Tel: 0086-27-81778799
- Fax: 0086-27-81778799
- Mobile: 0086-183 0270 5967
- Whatsapp: +86-183 0270 5967